
Introduction on how to use the telnet server of the handheld

The telnet server of the handheld is enabled by default, the detailed steps are as follows:

1. Enable the telnet client of the PC。
   For XP/2003， enable telnet service within the system service, and enable telnet client by 'Add/Delete components' in 'Control Panel';
   For Windows 7, open 'Control Panel->Program->open/close windows, click telnet client within the skipping window and then choose 'OK';
2. Enable the wifi of the handheld, ensure the IP addresses of the handheld and PC are in the same network segment;
3. Open the command window of the PC, input 'telnet 192.168.1.2' and then press 'Enter', We use IP 192.168.1.2 as the reference, please modify it according to the requirement;

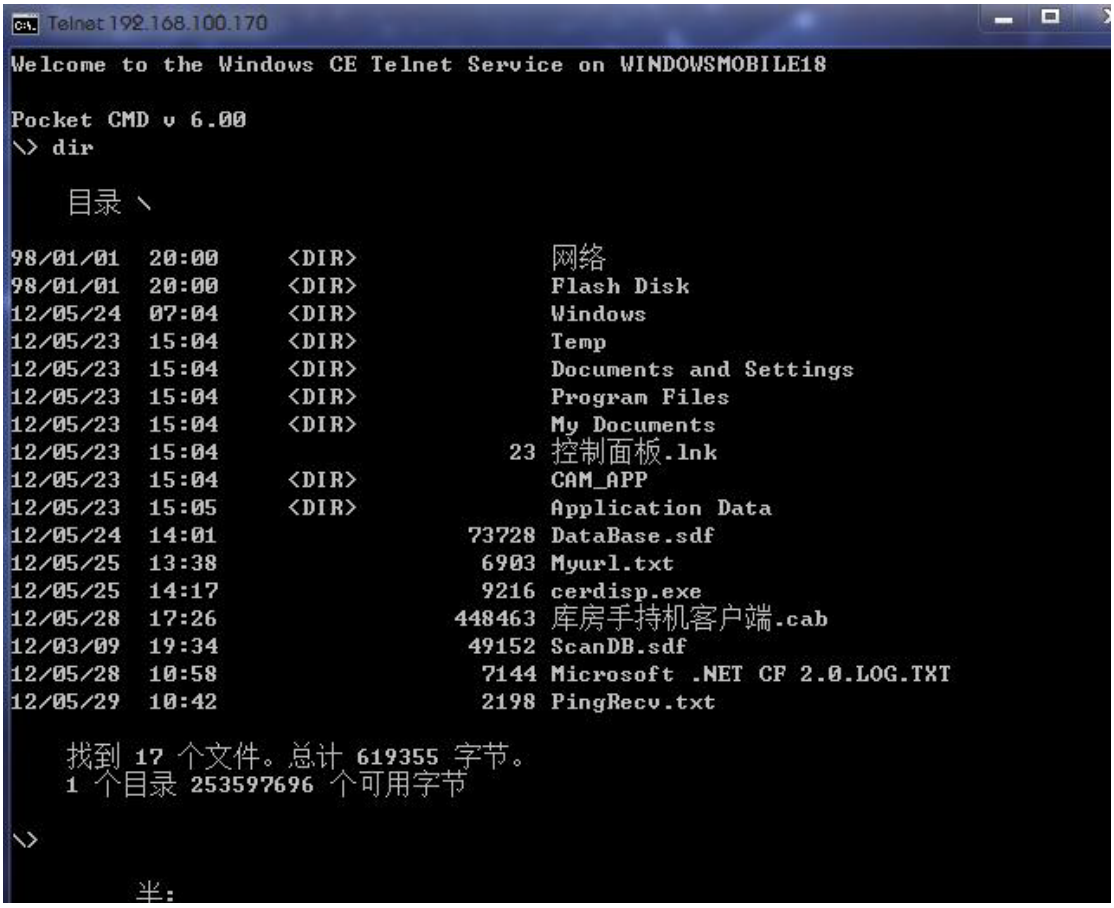

We input commands 'dos' and 'dir' for reference to check the files within the handheld in the above Pic.