
Introduction on how to configure the VPN of the handheld


VPN, virtual private network, we have to set the network of the handheld to ensure that it can be connected to the VPN server before using the VPN. It can be checked by using ping command after setting the network. The following introduces the steps in details:

1. Create VPN connection


   Click 'Settings'->'Network and Dial-up Connections' and in the skipping out window of 'Connection';

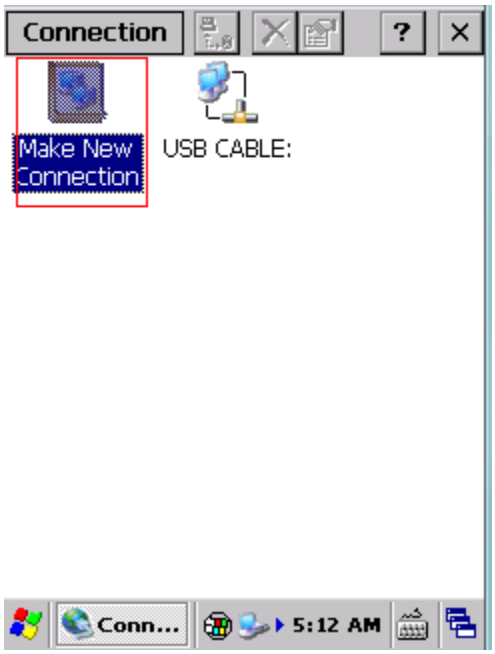

Double click 'Make New Connection', and the interface is as follows:

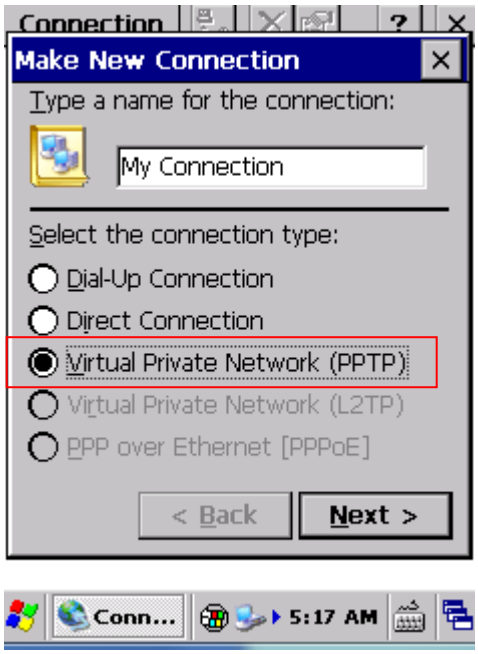

Choose VPN and choose 'Next', then input the IP address of the VPN server within the skipped window.

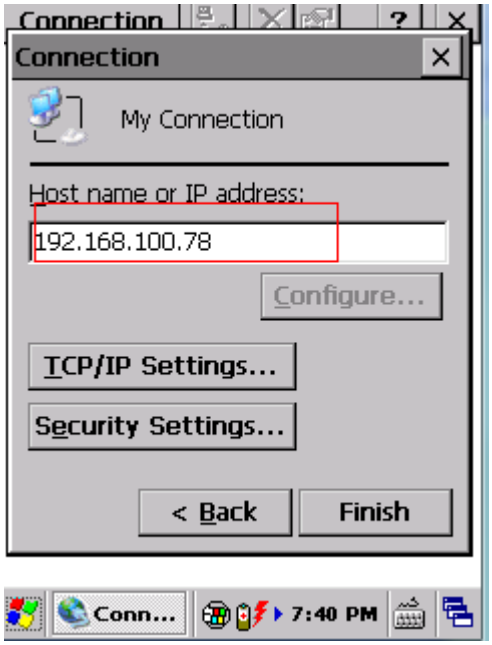


Choose ‘Security Settings’, click ‘Preview user name and password’ which hints that you are required to input the user name and password for each connection, then choose ‘OK’ to save to settings.(Note: PAP and CHAP are the two security authentication methods of PPP protocol.)



2. VPN connection

   After the VPN configurations, the icon of ‘My Connection’ will be added in the window of ‘Connection’;

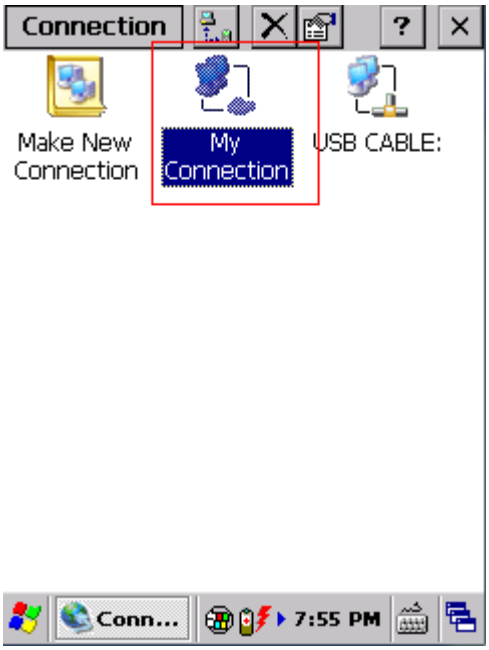

Double click ‘My Connection’, and you will be required to input the user name and password, then click ‘OK’ to save to settings, after the process, the device can connect to the VPN server successfully;

